

## Step 1: Power your radio

Insert the AC adapter to the **DC 9V** jack to power your radio.

Install 6 AA batteries (not included) for backup power.

1. Open the battery compartment.
2. Insert batteries as indicated by the polarity symbols (+ and -) inside.
3. Replace the battery cover.



## Step 2: Place the radio

Keyhole Slots



Place the radio on a flat surface where it receives alerts clearly. Avoid placing it near large obstructions or metal surfaces (such as a refrigerator).

Optionally, use the keyhole slots on the radio's back to mount the radio on a wall.

## Step 3: Use the antenna



Telescoping Antenna

EXT ANT

Fully extend the telescoping antenna.

For better reception, connect an external antenna to the **EXT ANT** jack using an optional adapter cable with a phono plug (not supplied).

## Step 4: Set the radio



1. Press **MENU** to go to the menu mode.
2. Use **▲**, **▼**, **◀**, **▶** to select menu items and change the settings; use **SELECT** to confirm each setting.
3. After setting, press **MENU** to exit.

## Step 5: Receive alerts and understand indicators

Press **WEATHER/SNOOZE** to listen to the broadcast (see "**NWS Alert Descriptions**" on page 12 of the User's Guide for a list of alert descriptions).

During broadcasting, press **◀** or **▶** to adjust the volume.

### Understanding the Alert Indicators

Alerts are indicated with differently colored LEDs:

- Red – **WARNING**
- Orange – **WATCH**
- Yellow – **ADVISORY**
- Green – **READY**

When an alert is in effect, the corresponding alert indicator flashes for 60 seconds and then lights for the duration the alert is in effect.

Flip up or down to change the display's angle

